Installation Sheet

KSR6220-6223

Read these instructions before commencing installation. Please give these instructions to the owner/occupier after installation to retain for future reference/maintainence.



These fittings are Class I and are required to be Earthed

Important Information

It is recommended that these luminaires are installed and fitted by a qualified electrician ensuring the installation complies with current IEE wiring regulations & local building

control. These products are designed for connection to a 240V~50Hz supply.

Any faulty, broken or damaged luminaires should be replaced immediately. KSR will not accept responsibility for any claims arising from a poor installation.

Please Note: The limited warranty shall be deemed null and void in the following circumstances: Failure by the installer, end user or any third party to exercise caution to protect any covered product or part from outside damage, adverse temperature, humidity conditions, fluctuations in the electrical system or physical abuse as well as failure related to workmanship in the installation of the products or parts.

Important User Advice

Always switch off mains supply before servicing.

This luminaire is suitable for indoor use only and should not be fitted to damp or wet surfaces such as freshly plastered or painted ceilings. At the end of life the luminaire is classed as WEEE under directive 2014/30/EU and should be disposed of in accordance with local legislation

Installation Procedure

Remove ceiling bracket from the fitting by loosening the retaining screws.

Fix bracket to the ceiling using suitable fixings for the ceiling type.

Connect the fitting to mains supply by terminating to the terminal block located on the inside of the luminaire plate, ensure that the fitting is Earthed as it is a class I product (Fig.1).


Refit the luminaire to the bracket and retighten the retaining screws.


Please observe the minimum safe distance from the nearest illuminated surface when setting the beam direction. Adjust beam aim by turning and tilting head of luminaire (Fig.2).

Turn on the mains supply and ensure the luminaire is working correctly.

Caution: Never touch a hot lamp.

 Fig. I




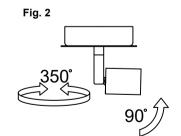








Available finish: Chrome

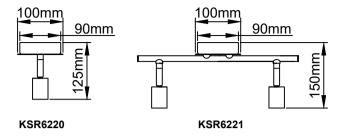

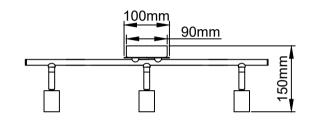

KSR6222

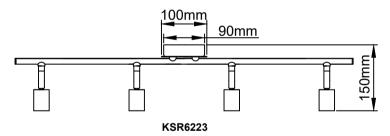

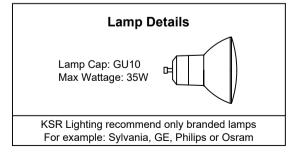

KSR Lighting Aftersales: 023 92 674343 E-mail: aftersales@ksrlighting.com