Installation Sheet

KSR1152

Read these instructions before commencing installation. Please give these instructions to the owner/occupier after installation to retain for future reference/maintainence.

These fittings are Class II and are not required to be Earthed

Important Information

It is recommended that these luminaires are installed and fitted by a qualified electrician ensuring the installation complies with current IEE wiring regulations & local building control. These products are designed for connection to a 240V~50Hz supply. Any faulty, broken or damaged luminaires should be replaced immediately. KSR will not accept responsibility for any claims arising from a poor installation.

Please Note: The limited warranty shall be deemed null and void in the following circumstances: Failure by the installer, end user or any third party to exercise caution to protect any covered product or part from outside damage, adverse temperature, humidity conditions, fluctuations in the electrical system or physical abuse as well as failure related to workmanship in the installation of the products or parts.

Important User Advice

Always switch off mains supply before installing/servicing.

Do not use Megger or similar high voltage instruments. Due to the fact this product contains electronic components that maybe damaged by high test voltages, they must be disconnected from the circuit before testing.

To prevent damage to the driver, do not mix with conventional magnetic ballasts on the same electrical circuit.

KSR recommends a maintenance schedule of washing down with soapy water (no abrasive cleaners) and greasing

all screws every 3 months.

At the end of life the luminaire is classed as WEEE under directive 2014/30/EU and should be disposed of in accordance with local legislation

Installation Procedure

Remove and retain the 2 screws holding the back plate to the wall light (located top and bottom of the fitting). Remove the single screw and retain to the cable housing.

Fix the plastic back plate to wall using suitable fixings for the substrate ensuring that it is installed with the arrow pointing up.

Connect the supply to the terminal block: Brown (Live) and Blue (Neutral) as per Fig.1.

Refit the cable housing.

Attach the wall light to the plastic plate using the 2 screws you retained earlier.

Switch on supply, test and adjust PIR.

Fig. I

Luminaire Mains Supply

L - Brown Live


N - Blue Neutral

The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced





Available finishes: Black or White

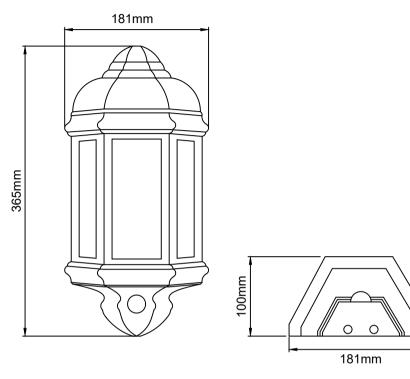

KSR1152

Lamp Details

Light Source: Dedicated LED

Wattage: 10W

Lumen Output: 400 Lumens

CRI: 82 Colour: 4000K

PIR Details

Detection Angle: 130° Time Adjustment: Min. 5 seconds ~ 5 Minutes Max. Lux Adjustment: Min: 5 lux ~

2000 lux Max.

Detection Range: 0-12m

This product contains a light source of energy efficiency class G

KSR Lighting Aftersales: 023 92 674343 E-mail: aftersales@ksrlighting.com