



Available finish:- White

Read these instructions before commencing installation. Please give these instructions to the owner/occupier after installation to retain for future reference/maintenance.

IP54 240VAC~50Hz

These Sensors are Class II and do not require an Earth connection

Important Information

It is recommended that these Sensors are installed and fitted by a qualified electrician ensuring the installation complies with current IEE wiring regulations & local building control. These products are designed for connection to a 240V~50Hz supply.

Any faulty, broken or damaged luminaires should be replaced immediately.

KSR will not accept responsibility for any claims arising from a poor installation.

Please Note: The limited warranty shall be deemed null and void in the following circumstances: Failure by the installer, end user or any third party to exercise caution to protect any covered product or part from outside damage, adverse temperature (normal operating ambient temperature -20 ~ +40°C), humidity conditions, fluctuations in the electrical system or physical abuse as well as failure related to workmanship in the installation of the products or parts.

Installation Guidelines

Always disconnect mains supply.

Ensure the photocell is suitable for the application.

Remove the photocell dome by turning it in an anti-clockwise direction. Place in a safe location.

Drill a 12mm in the location that you wish to install the photocell.

Pass the photocell through the hole and re-attach the photocell dome.

Ensure the photocell is located in the middle of the hole, tighten up the retaining ring.

Fix the control box (65mm centers)

Wire as per Figure 1.

Adjust the lux level required required via the adjuster (anti clockwise = lowest, clockwise = highest).

Turn on the power and test the Photocell, if in daylight simply fully cover the cell and wait for the luminaire to come on.

Location- Ensure the Photocell is not located in a position where the artificial lighting it controls will illuminate it, this may cause the Photocell to switch off.

Photocell Specification:

Mains Input - 220~240V AC 50/60Hz

Lux Setting - 5-50 Lux (Adjustable)

Rated Load - 10 Amp Maximum

Material Thickness: 0-7.5mm

Parasitic Power - 0.5W


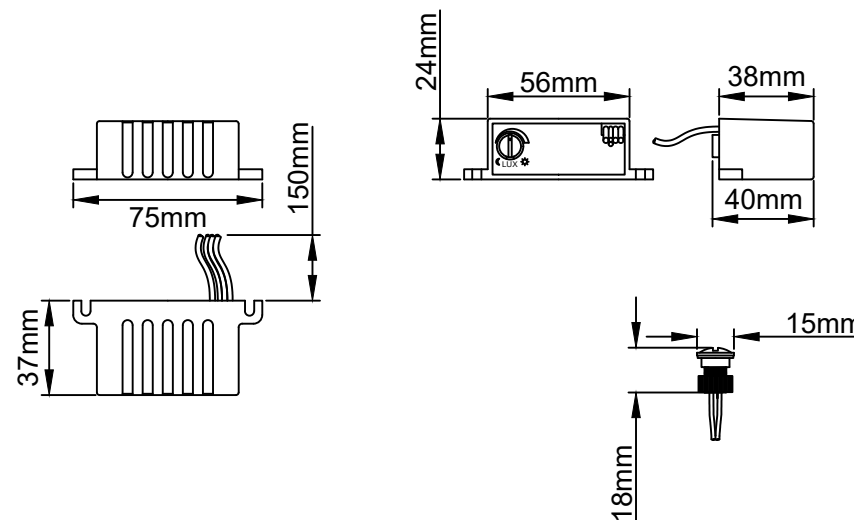


Fig.1

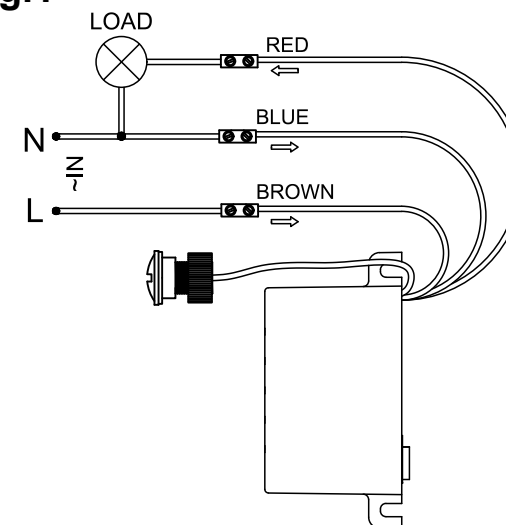

KSR Lighting Aftersales: 023 92 674343

E-mail: aftersales@ksrlighting.com