# Wall Mounted Touch Panel

### Model No.: T21, T22, T24, T25

4 Zone/1-5 color/Glass touch panel/Color slide/Wireless remote 30m distance/AAA x 2 battery



### Features

- Touch panel 4 zone 1-5 color RF remote.
- Each zone can remote control multiple RF 2.4G LED controllers.
- Ultra sensitive high strength glass touch panel with touch color slide in the middle.
- Smooth and accurate color adjustment by touching the color slide.
- Touch keys with chord tones and LED indicator.
- Free installation, no wiring, removable.
- AAA x 2 battery powered.
- White & Black glass panel available.

### **Technical Parameters**

Input and Output		Safety and
Output signal	RF(2.4GHz)	EMC standar
Working voltage	3VDC(AAA × 2)	
Working current	< 5mA(Without tune)	Safety stando
	< 20mA(with tune)	Radio Equipr
Standby current	< 20µA	Certification
Standby time	l year	
Remote distance	30m (Barrier-free space)	Warranty

En	viro	nm	en
	110		CII

Operation temperature	Ta:-30°C ~ +55°C
Case temperature (Max.)	Tc:+65°C
IP rating	IP20

afety and EMC	
NC standard (EMC)	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4
afety standard(LVD)	EN 62368-1:2020+A11:2020
idio Equipment(RED)	ETSI EN 300 328 V2.2.2
ertification	CE,EMC,LVD,RED

CE RoHS EMC LVD RED

5 years Warranty

### Weiaht

0	
Net weight	156g
Gross weight	192g

### Mechanical Structures and Installations





Installation diagram:





To fix the panel, two options are offered for selection:

Option 1: fix it on the wall with two screws. Option 2: adhere it to the wall with paster.

### Match with RF LED controller (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controller's Match key	Use Power Restart
Match:	Match:
Short press match key, immediately press zone	Switch off the power of the receiver, then switch on power,
key of the touch panel.	repeat again.
The LED indicator fast flash a few times	Immediately short press zone key 3 times on the touch panel.
means match is successful.	The light blinks 3 times means match is successful.
Delete:	Delete:
Press and hold match key for 5s to delete all match.	Switch off the power of the receiver, then switch on power,
The LED indicator fast flash a few times	repeat again.
means all matched remotes were deleted.	Immediately short press zone key 5 times on the touch panel.
·	The light blinks 5 times means all matched remotes were deleted.





Note: After touch power key to turn off light, long press power key for 5 seconds will turn on or turn off tone.

## Safety information

- 1. Read all instructions carefully before you begin this installation.
- When installing battery, pay attention to the battery positive and negative polarity. A long time without the remote control, remove the battery. When remote distance becomes smaller and insensitive, replace the battery.
- 3. If no response from the receiver, please re-match the remote.
- 4. Gently handle remote, beware of falling.
- 5. For indoor and dry location use only.