Installation Sheet KSRDL225

Scoop (() AR111 Adjustable Downlight)

Available Finishes: White

Read these instructions before commencing installation & retain them for future reference.

Important Information

It is recommended that luminaires are installed and fitted by a qualified electrician ensuring the installation complies with current IEE wiring regulations & local building control. These products are designed for connection to a 12V Low Voltage supply. Any damaged parts should be replaced as soon as possible.

Fig.I

KSR will not accept responsibility for any claims arising from a poor installation.

0 D D

175mm Minimum Void Depth

Important User Advice

Always switch off mains supply before servicing, fitting or changing lamp. Check the lamp is correct for the application, including its voltage and wattage.

Ensure that the lamp is correctly located in the lampholder. Switch on electricity at mains.

Further adjustment to the lamp position should be done with extreme care as Remove front ring by twisting anti-clock wise, fit lamp into lamp holder and and 25mm above the fitting. Ensure there is adequate free air ventilation around the fitting 100mm all round Do not fit onto new plaster or damp areas. the lamps will get very hot, very quickly. Never touch a hot lamp. replace ring by twisting clock wise until locked in postion Fit this product as per the illustration shown in (Fig.I). fitted. Terminate all wiring to terminal block. Connect this product to a suitable 12V Low Voltage supply for type of lamp without intringing on joists, water pipes or electrical cables Cut a 174mm round hole in ceiling and ensure adequate minimum ceiling void Installation Details Turn on the mains supply to test the luminaire. G KSRDL225 ØRim Size 191mm





ØCut out

Void Depth Req'd

Max Wattage / Lamp Type AR111 75W

175mm