

## Installation Sheet

## KSRLP940/941

**Read these instructions before commencing installation & retain them for future reference.**

**IP20**    **240V 24W** 

### Important Information

It is recommended that luminaires are installed and fitted by a qualified electrician ensuring the installation complies to current IEE wiring regulations & local building control. Any damaged parts should be replaced as soon as possible. KSRL will not accept responsibility for any claims arising from a sub-standard installation.

The KSRLP940 & 941 AR111 LED lamps are designed to be installed in a suitable AR111 fixture with the driver mounted in free air space alongside the luminaire. The secondary output cables should not be cut or extended.





Ensure the mains supply is turned off before installing this lamp. Connect the Live and Neutral mains supply cables to the input terminals on the LED driver. The terminals are designed to allow loop in/out connection where multiple drivers are used.

Connect the inline plug on the lamp head unit to the driver and install the lamp into your luminaire. Ensure the link cable between the head unit and driver does not snag on any sharp edges if passing through a luminaire.

Turn on the mains supply and test the lamp.

LED Lighting is an inductive load, as such it may be necessary to uprate your MCBs to allow for any inrush current.

### Electrical Connections

| Mains Input   | Secondary Output   |
|---|--|
|  (L) Live - Brown   |  (+) Positive             |
|  (N) Neutral - Blue |  (-) Negative (Pre Wired) |

## Lamps






## AR111 60° LED Lamp

KSRLP940

- AR111 24W 60 Deg 4000k - White Finish

KSRLP941

- AR111 24W 60 Deg 4000k - Grey Finish

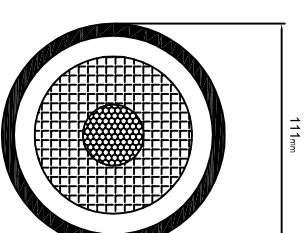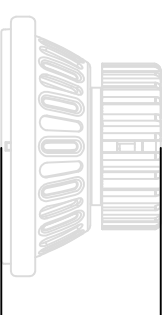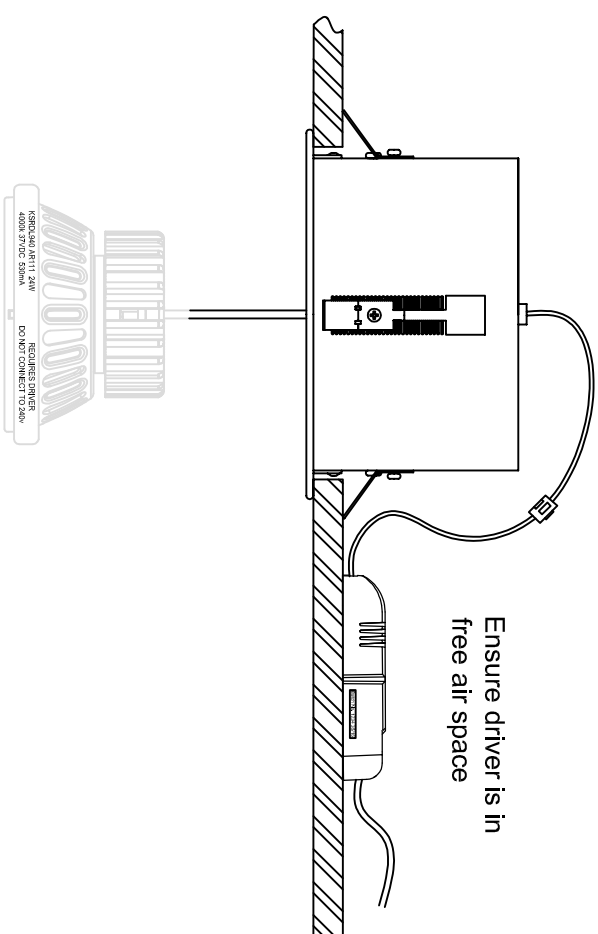

**KSRL**  
**LIGHTING**

Product Information

KSRL Lighting Aftersales: 023 92 674343  
E-mail: [info@ksrl-lighting.co.uk](mailto:info@ksrl-lighting.co.uk)

Drq No. KSRLP940/941-IS-B-MAR