Installation Sheet KSR7172

installation to retain for future reference/maintainence Read these instructions before commencing installation. Please give these instructions to the owner/occupier after



These fittings are Class I and must be Earthed

Important Information

control. These products are designed for connection to a 240V~50Hz supply. ensuring the installation complies with current IEE wiring regulations & local building Any faulty, broken or damaged luminaires should be replaced immediately It is recommended that these luminaires are installed and fitted by a qualified electrician

KSR will not accept responsibility for any claims arising from a poor installation.

operating ambient temperature -10 - +30°C), humidity conditions, fluctuations in the electrical system or physical abuse as well as any third party to exercise caution to protect any covered product or part from outside damage, adverse temperature (normal Please Note: The limited warranty shall be deemed null and void in the following circumstances: Failure by the installer, end user or failure related to workmanship in the installation of the products or parts.

Important User Advice

Always switch off mains supply before servicing.

damaged by high test voltages, they must be disconnected from the circuit before testing. This luminaire is suitable for outdoor use and requires regular cleaning maintenance to preserve the products finish and light output Do not use Megger or similar high voltage instruments. Due to the fact this luminaire contains electronic components that maybe

To prevent damage to the driver, do not mix with conventional magnetic ballasts on the same electrical circuit

At the end of life the luminaire is classed as WEEE under directive 2014/30/EU and should be disposed of in accordance with local

Installation Procedure

Familiarize yourself with the luminaire/installation procedure and ensure the power is safely isolated before installing the luminaire.

Locate suitable area(s) for the installation

Using the fixings supplied drill and prepare two fixing holes for the base plate to locate onto

When the base plate is in place over the holes prepared fasten in place using and screwdriver or electric dril

If using spike accessory (KSR7173) the screw fixings and rawl plugs are not required

Please ensure the ground into which you want to install the spike is sufficient to support the weight of the fitting

Push the spike into the ground, until the base plate is level with the ground (this supports the weight of the unit)

Using a suitable IP rated connector (Not supplied) terminate the wiring L-Live (Brown), N-Neutral and E-Earth (Green/Yellow) to

Adjust head section to point in the desired direction.

Turn on the power and test the luminaire.

Note: This luminaire requires a 240v AC supply, no external driver is required.

Lamp Details

9W LED Module, 1008 Lumens

3000K Warm White


when the light source reaches its end of life the whole The light source of this luminaire is not replaceable; luminaire shall be replaced






Available finish:- Anthracite


Surface Mounting procedure onto a hard surface

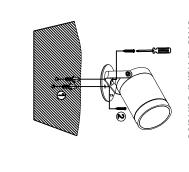




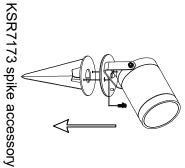



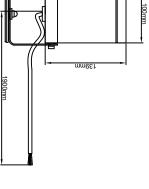

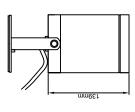



E-mail: aftersales@ksrlighting.com KSR Lighting Aftersales: 023 92 674343