

Read these instructions before commencing installation & retain them for future reference.

IP65

Changing the Tilt Bezel:

Step 1:

Hold the 'can' of the downlight securely, avoid putting pressure on the retaining springs against the bezel.

Twist the bezel anti-clockwise for a quarter turn, this should allow the rim and LED module to drop from the 'can' of the fixture.


Step 2:

Without putting strain on the connecting cable, securely hold the LED module/heat sink and twist the bezel anti-clockwise to release it.


Step 3:

Complete steps 2 then 1 twisting the components back into place in a clockwise direction, do not over tighten the two parts, once resistance is felt this should be sufficient to complete the bezel changeover. Ensure all seals and gaskets are situated correctly before installing the luminaire.


Please refer to the luminaire installation guidelines to complete the installation of your Qr10 Tilt Downlight.

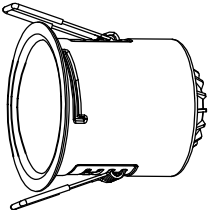

Luminaire 'Can'

 


LED Module/Heatsink

 


Bezel


	ØRim Size	ØCut out	Void Depth Req'd
KSRFRD363-5	85mm	75mm +/- 1mm	90mm

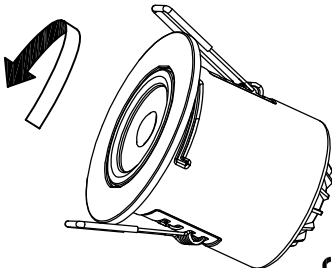

Step 1

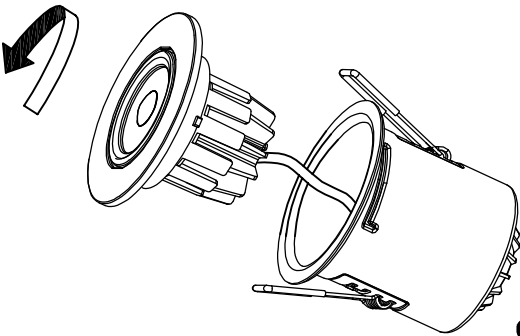

Step 2

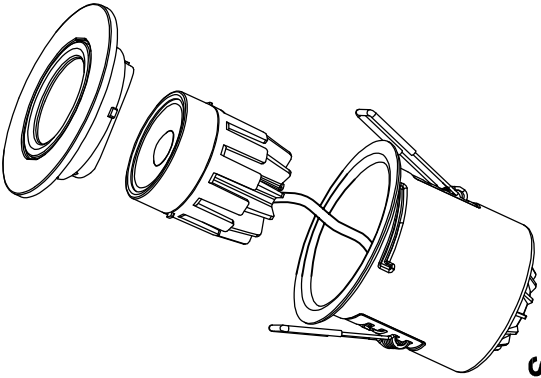

Step 3



KSR Lighting After-sales: 023 92 674343  
E-mail: [info@ksr-lighting.co.uk](mailto:info@ksr-lighting.co.uk)