Available finish:- White Finish

Read these instructions before commencing installation. Please give these instructions to the owner/occupier after installation to retain for future reference/maintainence.

These fittings are Class I and must be Earthed

Important Information

It is recommended that these luminaires are installed and fitted by a qualified electrician ensuring the installation complies with current IEE wiring regulations & local building control. These products are designed for connection to a 240V~50Hz supply.

Any faulty, broken or damaged luminaires should be replaced immediately.

KSR will not accept responsibility for any claims arising from a poor installation.

Please Note: The limited warranty shall be deemed nul and void in the following circumstances: Failure by the installer, end user or any third party to exercise caution to protect any covered product or part from outside damage, adverse temperature (normal operating ambient temperature 0 - 25°C), humidity conditions, fluctuations in the electrical system or physical abuse as well as failure related to workmanship in the installation of the products or parts.

Important User Advice

Always switch off mains supply before servicing.

This luminaire is suitable for indoor use only and should not be fitted to damp or wet surfaces such as freshly plastered or painted walls.

Do not use Megger or similar high voltage instruments. Due to the fact this luminaire contains electronic components that maybe damaged by high test voltages, they must be disconnected from the circuit before testing.

To prevent damage to the driver, do not mix with conventional magnetic ballasts on the same electrical circuit.

At the end of life the luminaire is classed as WEEE under directive 2014/30/EU and should be disposed of in accordance with local legislation

Installation Procedure

Familiarize yourself with the luminaire/installation procedure and ensure the power is safely isolated before installing the luminaire.

Separate the LED/Diffuser plate from the main body by pulling apart from one end.

The LED cable and Earth Lead from the LED/Diffuser can be disconnected for ease of installation.

Offer the main body up to the ceiling and mark the fixing points. If using surface conduit ensure the besa boxes are at 600mm centers.

Drill and secure the main body in place, dressing the supply cable though either of the three rear entry points or end caps. Connect the mains wiring, (SL) Switch Live, Unswitched Live (PL), Neutral (N) and Earth ().

Please note: For testing purposes a provision should be made in the circuit for disconnection of the unswitched live (i.e. key switch), Offer up the LED tray and connect the two support straps to the tabs on the main body.

Connect the LED supply wire and earth connections, then snap the LED plate onto the main body, ensuring it is properly located along the whole length without trapping any cables.


Turn on the power and test the luminaire.


This fitting requires a 24 Hour initial charge period prior to any emergency testing, please see overleaf for testing routine, write on the battery label in permanent ink the date of commissioning. All results must be recorded and left with the end user.


The battery has a rated design life of 4 years but should be replaced if the duration of operation is less than 3 hours after a 24hr charge time with no interrupted supply.

LEDs are an inductive load so avoid unwanted MCB tripping it may be necessary to uprate your breakers.



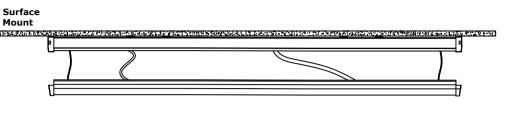

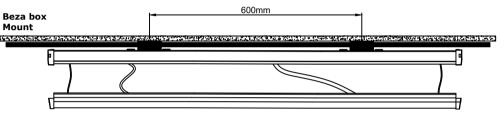

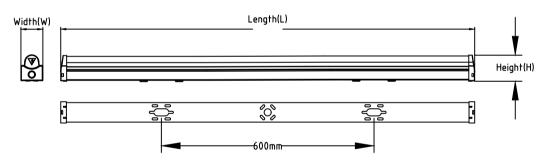

Lamp Details											
Product Code	Description	Dimensions L x W x H	Wattage	Colour	Lumens						
KSR9840EM	Navara X-4S	1168mm x 62mm x 75mm	23W	4000K	2760						
KSR9841EM	Navara X-4T	1168mm x 62mm x 75mm	40W	4000K	4800						
KSR9842EM	Navara X-5S	1457mm x 62mm x 75mm	38W	4000K	4560						
KSR9843EM	Navara X-5T	1457mm x 62mm x 75mm	60W	4000K	7200						
KSR9844EM	Navara X-6S	1727mm x 62mm x 75mm	48W	4000K	5760						
KSR9845EM	Navara X-6T	1727mm x 62mm x 75mm	65W	4000K	7800						

The light source of this luminaire is not replaceable; when the light source reaches its end of life the light source and control gear shall be replaced

This product contains a light source of energy efficiency class D

KSR Lighting Aftersales: 023 92 674343 E-mail: aftersales@ksrlighting.com All tests must be undertaken at times of least risk and in accordance with EN 50172:2004 as indicated below:

Daily:

LED charge indicators shall be visually inspected for correct operation.

Monthly:

(in addition to the daily check) If automatic testing devices are used, the results of the short duration tests shall be recorded. Test shall be carried out as follows:

1. Switch the luminaire over to emergency mode to operate from the batteries by simulating a failure of supply to the emergency circuit for a period sufficient to ensure correct luminaire operation.

Note: The period of simulation failure should be sufficient for the purpose of this clause whilst minimising damage to the system components e.g lamps. During this period, all luminaires shall be checked to ensure that they are present, clean and functioning correctly. At the end of this test period, the unswitched supply should be restored and any indicator lamp or device should be checked to ensure that is showing that the supply has been restored.

Annually:

If automatic testing devices are used, the results of the short duration tests shall be recorded. For all other systems the monthly inspection shall be carried out and the following additional tests made:

- 1. Each luminaire shall be tested monthly as above but for its full duration in accordance with the manufacturer's information.
- The unswitched supply for the luminaire should be restored and any charge indicator lamp or device should be checked to
 ensure that it shows the unswitched supply has been restored. The charging arrangements should be checked for proper
 functioning.
- 3. The date of the test and its results shall be recorded in the system logbook.

A copy of this report must accompany any emergency luminaire returned to KSR Lighting for any reason.



Emergency Lighting Periodic Test Schedule

All emergency lighting should be installed and tested in accordance to EN5266-1:2011. This test schedule should remain onsite and be accessible to the relevant authorities on request.



														Em No.
														Em No. Luminaire Location
														Luminaire Type
														Start Time
														Duration (Minuets)
														Pass/Fail*
														Comments/Actions
						COHHIBITIS/ACHOIS		Date of Test Completion:	rest conducted by:	Hose Donalist Dec		olic Address:	0#0 >>>	

 $\sqrt{=}$ Pass, X=Fail, N/T=Not Tested, N/A=No Access, U/T=Uncomplete Test