

Installation Sheet

KSR1500-1504

Read these instructions before commencing installation. Please give these instructions to the owner/occupier after installation to retain for future reference/maintenance.

IP44/IP65    $\text{I}_{0.3\text{m}}$  240V~50HZ 9W LED Only

These fittings are Class II and do not require an Earth

Important Information

It is recommended that these luminaires are installed and fitted by a qualified electrician ensuring the installation complies with current IEE wiring regulations & local building control. These products are designed for connection to a 240V~50Hz supply. Any faulty, broken or damaged luminaires should be replaced immediately. KSR will not accept responsibility for any claims arising from a poor installation.

Please Note: The limited warranty shall be deemed null and void in the following circumstances: Failure by the installer, end user or any third party to exercise caution to protect any covered product or part from outside damage, adverse temperature (normal operating ambient temperature -15 ~ +40°C), humidity conditions, fluctuations in the electrical system or physical abuse as well as failure related to workmanship in the installation of the products or parts.

Important User Advice

Always switch off mains supply before servicing, fitting or replacing lamps.

Always check the lamp is correct for the application, including its voltage and wattage. Ensure the lamp is correctly located in the lampholder. To prevent damage to the luminaire, do not mix with conventional magnetic ballasts on the same electrical circuit.

At the end of life the luminaire is classed as WEEE under directive 2014/30/EU and should be disposed of in accordance with local legislation.

General Maintenance

 
 
General maintenance and cleaning should be performed at least quarterly.

Clean product outer by washing down with soapy water (no abrasive cleaners) and greasing any nut/bolts where appropriate every 3 months. After any maintenance or lamp replacement, remember to check all seals undamaged and intact.


Installation Procedure

IP65 Wall Lights - Ensure mains supply is turned off. Locate luminaire. Remove base by loosening the two screws, secure the base in position using suitable fixings ensuring the terminal block is located at the top. Connect supply leads with terminal block: Brown (L), Blue (N). Re-fit to base greasing screws, remove the hex bolts and remove lamp cap, fit lamp and re-fit the lamp cap ensuring that the seals on the bolts are in place and the bolts are greased to ease future lamp changes. Do not over tighten bolts. Turn on mains supply and test luminaire.



IP44 Spike Light - Ensure mains supply is turned off. Locate luminaire. Installation of the spike version will require a suitable IP rated connector. Prepare and terminate the supply cable Brown (L), Blue (N). Unscrew the lamp cap (anti-clockwise) fit lamp and re-fit lamp cap ensuring that the seal is in place. Grease all screws. Turn on mains supply and test luminaire.

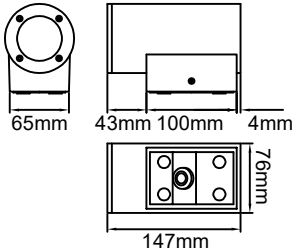



KSR1500

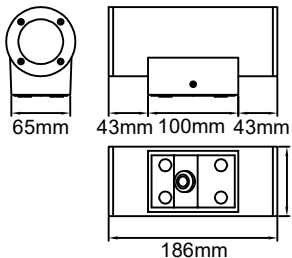 



KSR1501

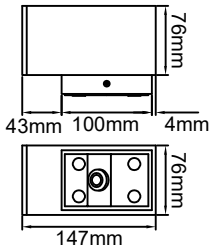  

KSR1502

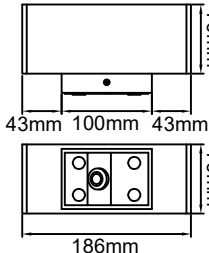  

KSR1503

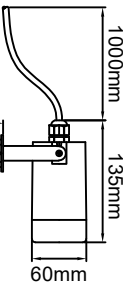  

KSR1504

Lamp Details
Lamp Cap: GU10 Max Wattage: 9W LED Only Max Lamp Temperature: 80°C
NOT SUITABLE FOR HALOGEN LAMPS!!!



Norcia



GU10 Plastic Range

Available finish:- Black



KSR Lighting Aftersales: 023 92 674343
E-mail: aftersales@ksrlighting.com