

Read these instructions before commencing installation. Please give these instructions to the owner/occupier after installation to retain for future reference/maintenance.

IP65   220-240VAC~50/60HZ

These fittings are Class II and do not require to be Earthed

Important Information

It is recommended that these controls are installed and fitted by a qualified electrician ensuring the installation complies with current IEE wiring regulations & local building control. These products are designed for connection to a 220-240V~50/60Hz supply. Any faulty, broken or damaged sensors should be replaced immediately.

KSR will not accept responsibility for any claims arising from a poor installation.

Please Note: The limited warranty shall be deemed null and void in the following circumstances: Failure by the installer, end user or any third party to exercise caution to protect any covered product or part from outside damage, adverse temperature, humidity conditions, fluctuations in the electrical system or physical abuse as well as failure related to workmanship in the installation of the products or parts.

Important User Advice

Always switch off mains supply before fitting or servicing.

Do not use Megger or similar high voltage instruments. Due to the fact this control contains electronic components that maybe damaged by high test voltages, they must be disconnected from the circuit before testing.

To prevent damage to the control, do not mix with conventional magnetic ballasts on the same electrical circuit.

At the end of life the luminaire is classed as WEEE under directive 2014/30/EU and should be disposed of in accordance with local legislation.

Installation Procedure

KSR recommends that you familiarise yourself with the installation. Once you are completely satisfied:

Safely isolate the mains supply.

Locate the area's suitable to install this control on the luminaire (See KSR98120, KSR98121 or KSR98122 for further information).

Avoid the following situations:

Avoid pointing the detector towards objects with highly reflective surfaces, such as mirrors etc.

Avoid metal objects in the line of sight.

Avoid pointing the detector towards objects that may move in the wind, such as curtains, tall plants etc


Install the sensor on to the luminaire.

Connect the wiring as per the instructions supplied with the highbay. If you do not have these please contact KSR for a copy or download from www.ksrlighting.com



See overleaf for setting options,

never remove the cover or adjust the dip switches without safely isolating the mains supply.

Switch on the power and test.

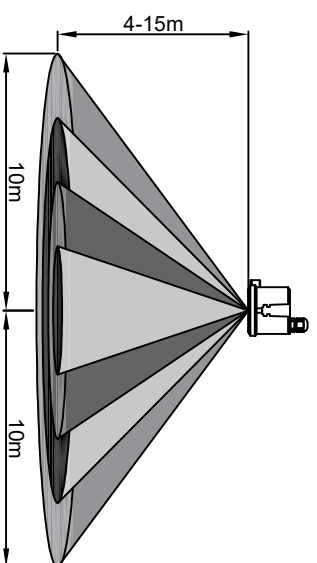

KSR
LIGHTING

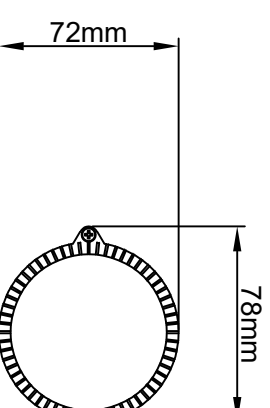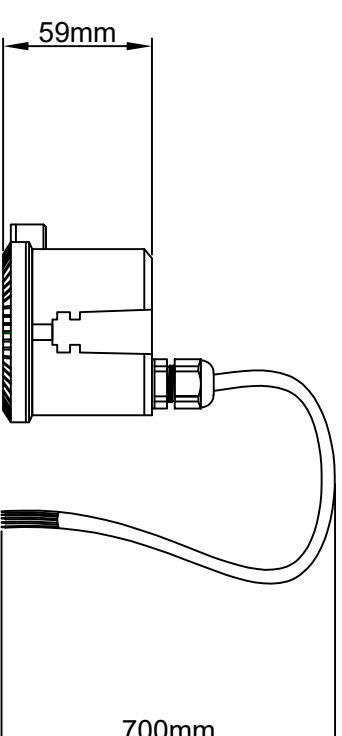

Available finish: Black

Sensor Specification:

Mains Input - 220~240VAC 50/60Hz

Lux Control - 2, 10, 50 or 2000 Lux

Hold Time - 5s, 30s, 90s, 3min, 5min, 10min, 20min or 30min

Rated Load - LED 1000W or Halogen 2000W

Detection Area - 360°

Detection Range - 50% or 100%

Detection Radius - 10m Max (<24°C)

Stand-by Period - 0s, 10s, 1min, 5min, 10min, 30min, 60min or ∞

Stand-by Dimming Level - 10%, 20%, 30% or 50%

Parasitic Power - 0.5W

Installation Height - 4m~15m

Detection Speed: 0.6~1.5m/s

Working Temperature: -20~+40°C

KSR Lighting After-sales: 023 92 674343

E-mail: aftersales@ksrlighting.com



Available finish: Black



Read these instructions before commencing installation. Please give these instructions to the owner/occupier after installation to retain for future reference/maintenance.

IP65   220-240V~50/60HZ

Instructions

Please note mains must be isolated before sensor is opened and set, this is due to the dipswitches being in close proximity of a high voltage circuit

1. To access Dip Switches remove cap by releasing screw on top of Sensor casing (screw driver required)
2. With fixing screw removed twist cover anti-clockwise until the cover is free from the main body
3. Referring to dipswitch table label on sensor housing and shown below set dip switches to desired setting and test
4. Once you are satisfied with your settings screw cover clockwise onto main sensor body and fix in place with screw to secure.

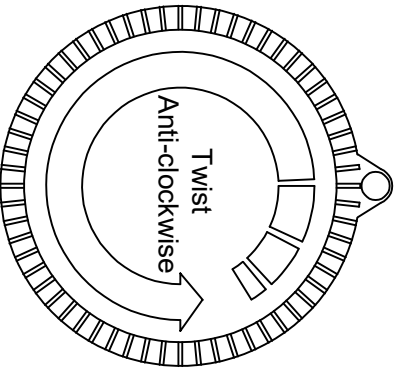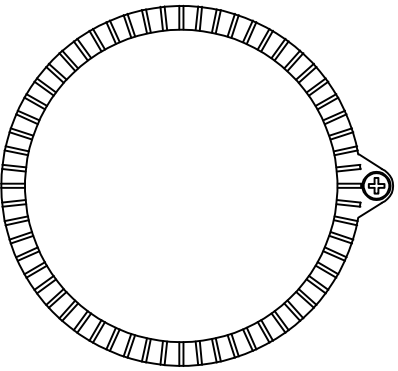

1 - Detection Range
Detection area can be reduced by selecting the combination on the Dip Switches, following the guide as shown here.

1	
●	100%
○	50%

ON   OFF

2 - Hold Time
Hold time means the time period you would like the light to remain 'on' once the sensor has detected movement.


2	3	4	
●	●	●	5s
●	●	○	30s
●	○	●	90s
●	○	○	3min
○	●	●	5min
○	●	○	10min
○	○	●	20min
○	○	○	30min

3 - Standby Period

The standby period is the time the sensor stays on for when the initial hold time has lapsed, this is used when the user wants the fitting to dim down to a reduced level for a set period of time after the initial hold time. If this is not required set dipswitches to 0s and the sensor will turn off after the hold time has lapsed

5	6	7	
●	●	●	10s
●	●	○	1min
●	○	●	5min
●	○	○	10min
○	●	●	30min
○	●	○	60min
○	○	●	+∞
○	○	○	0s

Microwave sensors will detect movement through certain materials, if this occurs reduce the detection area until any nuisance triggering stops.

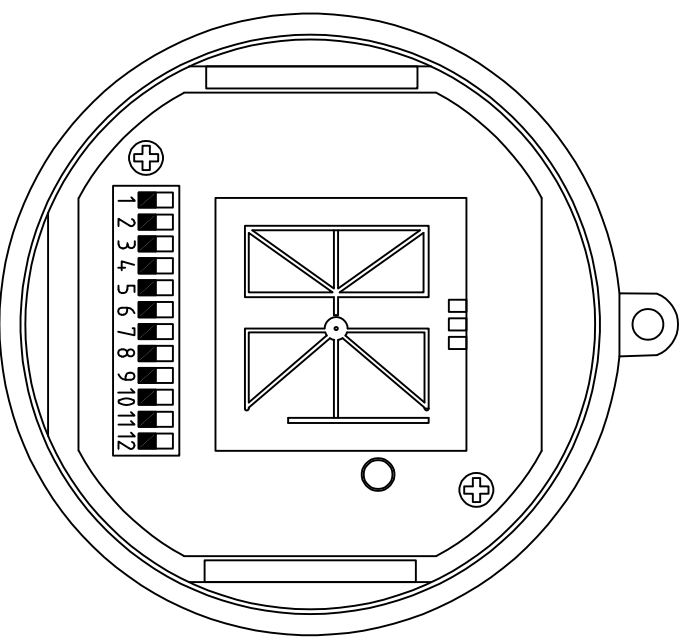

4 - Standby Dim Level

This is the level the sensor will dim down to after the initial hold time has lapsed. This is set in conjunction with switches 5,6 and 7.

8	9	
●	●	10%
●	○	20%
○	●	30%
○	○	50%

5 - Daylight Sensor

The daylight sensor can be set to bring the light 'on' at specific daylight levels. To have the sensor function in daylight set the Dip Switches to 2000lux.

10	11	12	
●	●	●	2000lux
●	○	○	50lux
○	○	●	10lux
○	○	○	2lux



KSR Lighting After-sales: 023 92 674343
E-mail: aftersales@ksrlighting.com