



Read these instructions before commencing installation. Please give these instructions to the owner/occupier after installation to retain for future reference/maintenance.

IP20 230-240VAC~50/60Hz 3W Max

This Emergency pack is Class II and does not require an Earth

**Important Information**


It is recommended that the luminaires and this Emergency Pack are installed and fitted by a qualified electrician ensuring the installation complies with the current IEE Wiring Regulations & Local Building Control. These products are designed for connection to a 240V 50Hz supply. Any broken or damaged parts should be replaced as soon as possible. KSR will not accept responsibility for any claims arising from a poor installation. Please Note: The limited warranty shall be deemed null and void in the following circumstances: Failure by the installer, end user or any third party to exercise caution to protect any covered product or part from outside damage, adverse temperature (normal operating ambient temperature 0 ~ 35°C), humidity conditions, fluctuations in the electrical system or physical abuse as well as failure related to workmanship in the installation of the products or parts.

**Important User Advise**



Always switch off the mains supply before installing / servicing, this Emergency Pack is suitable for internal use only (unless fitted within an IP rated fitting or enclosure). As the buyer / installer and / or user of this product it is your own responsibility to ensure the Emergency Pack is fit for purpose for which you have intended and operates to the relevant standards. KSR Lighting cannot accept any liability for loss, damage or premature failure resulting from inappropriate use. Do not use Megger or similar high voltage instruments due to the fact the Microwave Sensor contains electronic components that maybe damaged by high voltage testing, they must be disconnected from the circuit prior to testing. To prevent damage to the Microwave Sensor, do not mix with conventional magnetic ballasts on the same electrical circuit. At the end of life the EM Pack is classed as WEEE under directive 2014/30/EU and should be disposed of in accordance with local legislation.

**Installation Procedure**




Familiarize yourself with the installation procedure and ensure the power is safely isolated before installing the Emergency Pack. Clip the EM Pack into the designated slot in the gear tray or top part (fitting dependant) of the fitting intended for use, wire / connect as per Fig.1. Connect the 4 plug and play connectors to the 4 already housed in the fitting - E3 - Driver Input to marry up with D2 - Driver Output, in some cases, you will need the extra plug connector as shown below & right, for some of the Navara XIP fittings, you will also need the extension from E4 -(LED Input) to plug into the extension already on E3 to go to D2, E4 - goes to L1 for the CCT switch, E1 - to the mains input - T1 & E2 - to D1 driver input, dress the cable using the sticky pads and cable ties provided. Set up internal switch as required (self test or non self test) and remember to plug in the battery. If also fitting the Plug & Play MW Sensor (KSR98195) fix into place via the slots in the gear tray as shown overleaf, connect the plug & play connectors) M1 to the terminal block T1 and the other M2 to the EM Pack E1 as per Fig.2. Re-fit the gear tray / housing and ensure all connections are made as per the fitting instructions. re-fit the cover prior to turning on the mains supply to test.

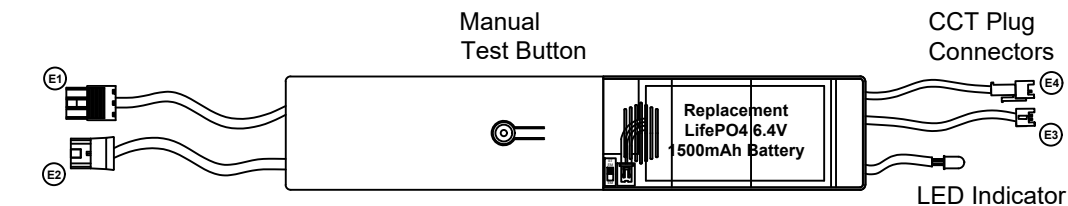

Plug Connectors to Driver & Terminal Block (unless using with MW Sensor).

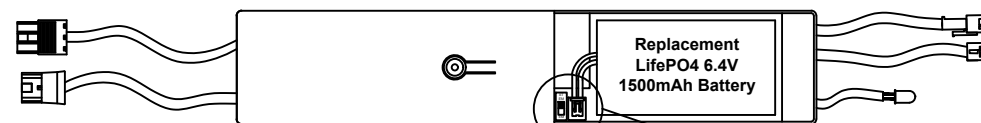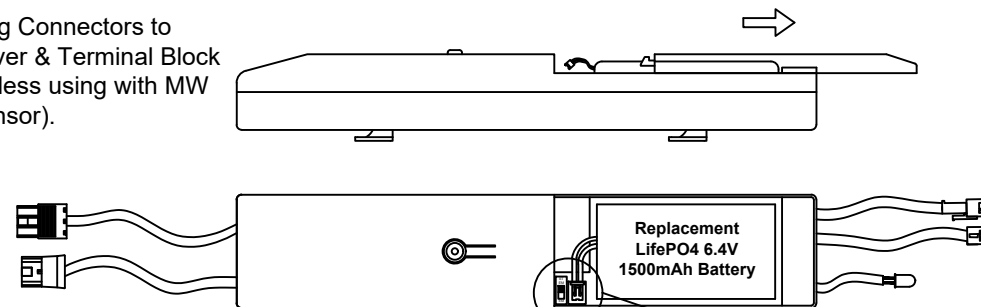

Slide off Battery cover to reveal battery plug (to be connected by the installer) & Self-Test or Standard Emergency Selector switch.

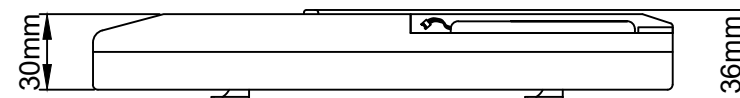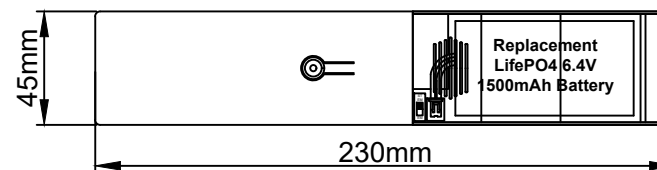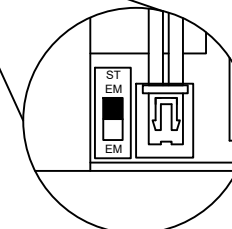

Please note: For manual testing purposes a provision is made in the form of a remote push button switch (Fig 1). See separate sheet for details on manual testing.

Turn on the power and ensure the module is showing charge indicator and the fault indicator is extinguished. This fitting requires a 24 Hour initial charge period, please see overleaf for testing manual routine, write on the battery label in permanent ink the date of commissioning. All results must be recorded and left with the end user.

The battery has a rated duration of at least 4 years but should be replaced if the duration of the operation is less than 3 hours after a 24hr charge time with no interrupted supply.

KSR Lighting Aftersales: 023 92 674343  
E-mail: aftersales@ksrlighting.com



<p>LifePO4 6.4V 1500mAh Battery</p>	<p><b>Emergency Pack Details</b> Supply: 230-240VAC 50/60Hz 55mA Battery: 6.4V 1500mAh LiFePo4 Output: 36-54VDC - 3W Maximum Charge Current: 300mA</p>
---	--




IP20 230-240VAC~50/60Hz 3W Max


This Emergency pack is Class II and does not require an Earth




**Standard Fitting.**

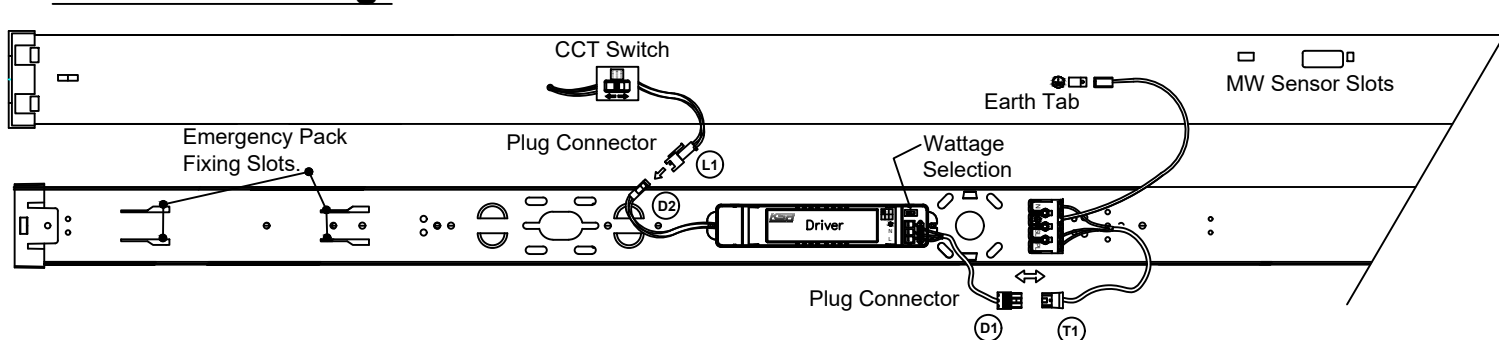

**Fitting with Plug & Play Emergency Pack.**


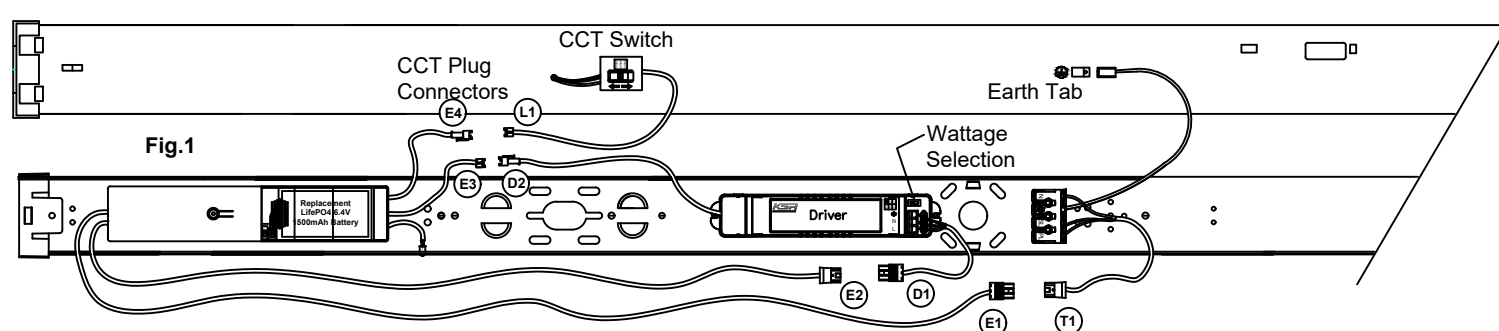


**Fitting with Plug & Play Emergency Pack & Microwave Sensor.**


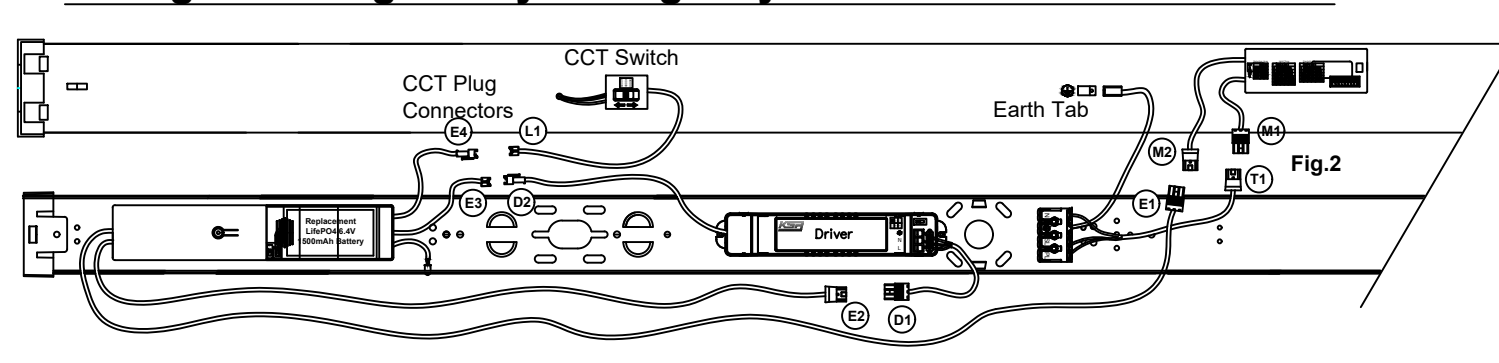


**IMPORTANT NOTE!**  
After the installation of the EM Pack and / or the MW Sensor pack, please make sure none of the cables are trapped when re-fitting the gear tray or diffusers / top part.

**KSR98189**

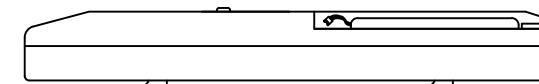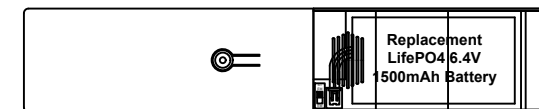


**KSR98195**

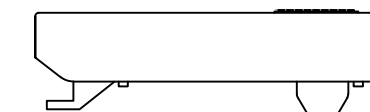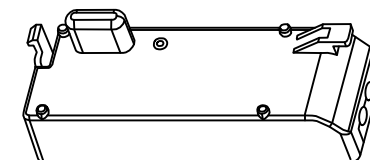



# IMPORTANT NOTE - PLEASE READ

IP20 230-240VAC~50/60Hz 3W Max


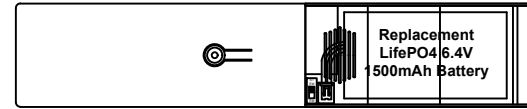


## Installation Procedure


Familiarize yourself with the installation procedure and ensure the power is safely isolated before installing the Emergency Pack. Clip the EM Pack into the designated slot in the gear tray or top part (fitting dependant) of the fitting intended for use, wire / connect as per Fig.1. Connect the 4 plug and play connectors to the 4 already housed in the fitting - E3 - Driver Input to marry up with D2 - Driver Output, in some cases, you will need the extra plug connector as shown below & right, for some of the Navara XIP fittings, you will also need the extension from E4 - (LED Input) to plug into the extension already on E3 to go to D2, E4 - goes to L1 for the CCT switch, E1 - to the mains input - T1 & E2 - to D1 driver input, dress the cable using the sticky pads and cable ties provided. Set up internal switch as required (self test or non self test) and remember to plug in the battery.

If also fitting the Plug & Play MW Sensor (KSR98195) fix into place via the slots in the gear tray as shown overleaf, connect the plug & play connectors) M1 to the terminal block T1 and the other M2 to the EM Pack E1 as per Fig.2.

Re-fit the gear tray / housing and ensure all connections are made as per the fitting instructions. re-fit the cover prior to turning on the mains supply to test.

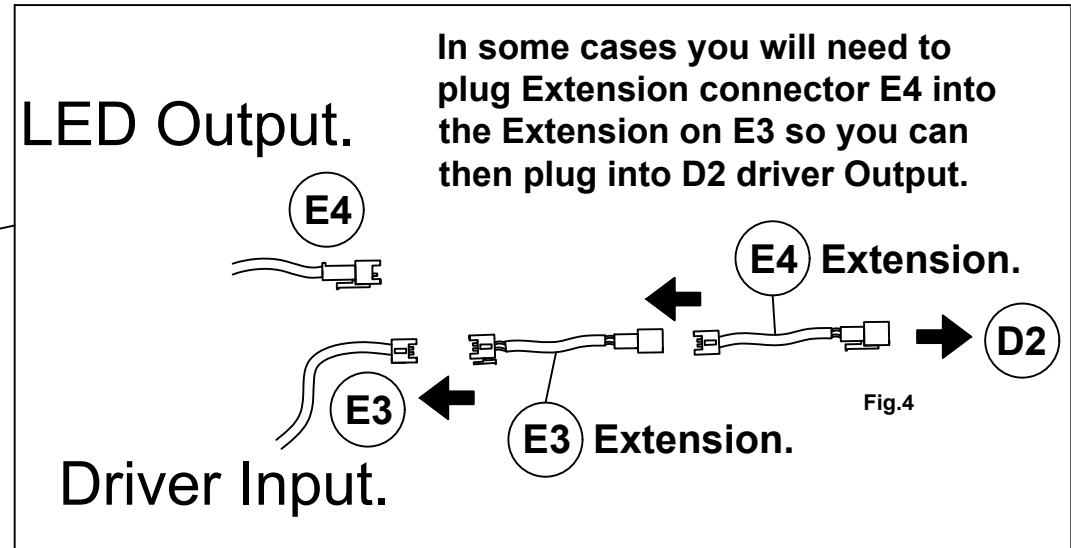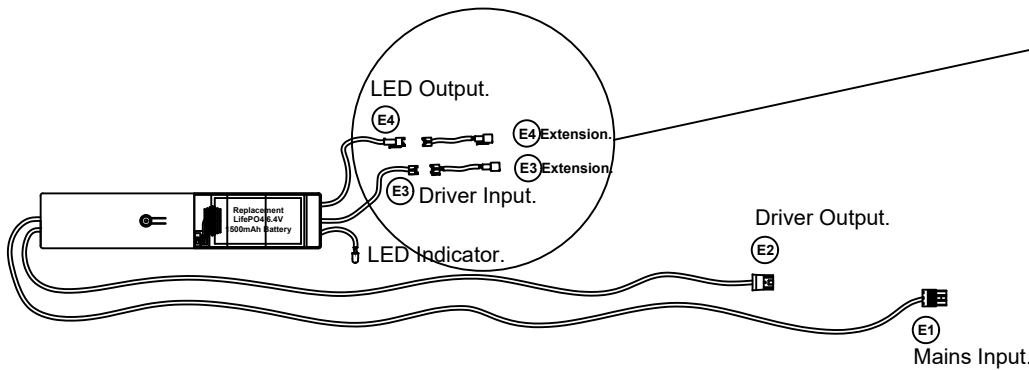

## Fitting with Plug & Play Emergency Pack.

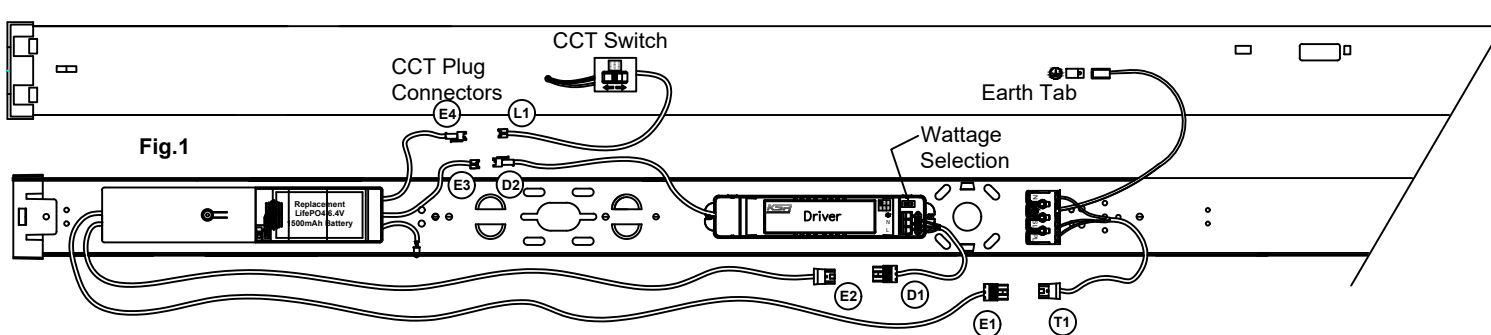

**IMPORTANT NOTE!**  
After the installation of the EM Pack and / or the MW Sensor pack, please make sure none of the cables are trapped when re-fitting the gear tray or diffusers / top part.





All tests must be undertaken at times of least risk and in accordance with EN 50172:2004 as indicated below:

**Daily:**

LED charge indicators shall be visually inspected for correct operation.

**Monthly:**

(in addition to the daily check) If automatic testing devices are used, the results of the short duration tests shall be recorded.

Test shall be carried out as follows:

1. Switch the luminaire over to emergency mode to operate from the batteries by simulating a failure of supply to the emergency circuit for a period sufficient to ensure correct luminaire operation.

**Note:** The period of simulation failure should be sufficient for the purpose of this clause whilst minimising damage to the system components e.g lamps. During this period, all luminaires shall be checked to ensure that they are present, clean and functioning correctly. At the end of this test period, the unswitched supply should be restored and any indicator lamp or device should be checked to ensure that it is showing that the supply has been restored.

**Annually:**

If automatic testing devices are used, the results of the short duration tests shall be recorded. For all other systems the monthly inspection shall be carried out and the following additional tests made:

1. Each luminaire shall be tested monthly as above but for its full duration in accordance with the manufacturer's information.
2. The unswitched supply for the luminaire should be restored and any charge indicator lamp or device should be checked to ensure that it shows the unswitched supply has been restored. The charging arrangements should be checked for proper functioning.
3. The date of the test and its results shall be recorded in the system logbook.

A copy of this report must accompany any emergency luminaire returned to KSR Lighting for any reason.





## Self Test Emergency Inspection/Testing Instructions

All full duration tests should be where possible be undertaken at times of low risk adjacent emergency luminaires we recommend that you you reset the inbuilt timer or run a manual 30 day test on alternate emergency luminaires to stagger testing times. Once commissioned fill in the date of the first test/install date this will allow the end user to monitor and record subsequent test information on the supplied report. All tests with the exception of the visual inspection will be completed automatically at the relevant times including battery charge condition and lamp status.

### Daily:

Visual inspection of the battery charge LED.

### Automatic Monthly (Every 30 Days):

(in addition to the daily check) The results of the short duration test shall be recorded.

### Automatic Annually (Every 180 & 360 Days):

(in addition to the daily check) The results of the full duration tests shall be recorded.

A copy of this report must accompany any emergency pack returned to KSR Lighting for any reason.

Performance Indicators	
Normal Operation	Red LED off, Green LED Solid
Automatic 30 Day Test	Red LED off, Green LED flashing once a second
Automatic 180/360 Day Test	Red LED off, Green LED flashing twice a second
Manual Simulated Power Failure	Red LED off, Green LED off
Manual 30 Day Test	Red LED off, Green LED flashing once a second
Manual 180/360 Day Test	Red LED off, Green LED flashing twice a second
Manual Fast Test (24 minutes)	Red LED off, Green LED four times a second

Manual Testing - Can only be completed under mains conditions	
Manual Simulated Power Failure	Hold test button until you hear 1 beep
Manual 30 Day Test	Hold test button until you hear 2 beeps
Manual 180/360 Day Test	Hold test button until you hear 3 beeps
Manual Fast Test (24 minutes)	Hold test button until you hear 4 beeps
Abort Test	Hold test button for 1 second
Reset Inbuilt Timer	Hold test button for 15 seconds long beep

Fault Indicators	
Battery/Charging Fault	Red LED flashing once a second, Green LED off, Beeps twice every minute until fault rectified
Lamp Fault	Red LED flashing twice a second, Green LED off, Beeps twice every minute until fault rectified
Failed Duration Test	Red LED solid, Green LED off, Beeps twice every minute until fault rectified



