Installation Sheet KSRSF365

Read these instructions before commencing installation. Please give these instructions to the owner/occupier after installation to retain for future reference/maintainence

These fittings are Class II and do not need an Earth, but Earth provision is provided

Important Information

complies with current IEE wiring regulations & local building control. These products are designed for connection to a It is recommended that these luminaires are installed and fitted by a qualified electrician ensuring the installation 240V~50Hz supply.

Any faulty, broken or damaged luminaires should be replaced immediately.

KSR will not accept responsibility for any claims arising from a poor installation.

end user or any third party to exercise caution to protect any covered product or part from outside damage, adverse temperature (normal operating ambient temperature -10°C - +30°C), humidity conditions, fluctuations in the electrical Please Note: The limited warranty shall be deemed null and void in the following circumstances: Failure by the installer

system or physical abuse as well as failure related to workmanship in the installation of the products or parts

Important User Advice

Always switch off mains supply before servicing.

maybe damaged by high test voltages, they must be disconnected from the circuit before testing. Do not use Megger or similar high voltage instruments. Due to the fact this luminaire contains electronic components that

At the end of life the luminaire is classed as WEEE under directive 2014/30/EU and should be disposed of in accordance To prevent damage to the driver, do not mix with conventional magnetic ballasts on the same electrical circuit.

with local legislation.

Installation Procedure

Isolate mains supply before installation.

Loosen locking screw located on side wall of body

With screw loosened twist diffuser anti clockwise and remove.

Pass intended supply cable(s) through the grommet ensuring a good quality seal around the cable(s) to preserve the IP54 rating never pass 2 cables through the same hole in the grommet as this will allow moisture to enter the luminaire through the gap between the cables reducing the IP rating to IP20.

Ensure the fixing surface is flat and even.

Fix base to the wall or ceiling using adequate fixings with regard to the type of substrate

Ensure incoming cables are protected.

with the luminaire powered on as this can damage the luminaire. Make sure the seal is in place in the diffuser and Select LED colour required using the toggle switch Fig. 3 on the LED board: Please Note never change the LED colour Terminate wiring as per Fig. 2, please note an Earth terminal is only supplied to aid the continuation of the Earth circuit.

please see overleaf for microwave sensor settings and set up

Replace the diffuser re-secure with a clockwise twist followed by tightening the locking screw

Turn on the mains supply and test luminaire

If using an optional rim clip the rim over the diffuser.

testing, please see overleaf for testing routine, write on the battery label in permanent ink the date of commissioning. All For the Maxima Emergency fitting (KSRSF363/365) a 24 Hour initial charge period is required prior to any emergency


results must be recorded and left with the end user.

The battery has a design life of at least 4 years but should be replaced if the duration of

operation is less than 3 hours after a 24hr charge time with no interrupted supply.

to a 'C' or 'D' type to avoid nuisance tripping. *Please note: Depending on the amount of fittings on a circuit you may have to upgrade the breaker






Available Rims: White, Chrome and Satin Chrome

Maxima

) 30W Dual CCT Bulkhead

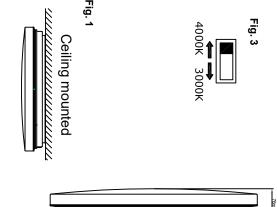


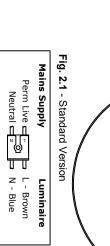


Fig. 2.2 - Emergency Version

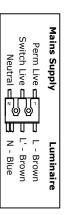

Wall mounted

Lamp Details

Lamp: LED

3000K - 2720 lumens 4000K - 2775 lumens Lumen Output: Wattage: 30W Colour: 3000K and 4000K CCT CRI: Ra>83

control gear shall be replaced The light source of this luminaire is not replaceable; when the light source reaches its end of life the light source and

E-mail: aftersales@ksrlighting.com KSR Lighting Aftersales: 023 92 674343

IP54 IK06 **监(←** □ (]0.3m/∮ 240V~50Hz 30W

KSR Microwave On/Off Sensor Set Up Guide

1 - Detection Area


Detection area can be reduced by selecting the combination on the Dip Switches, following the guide as shown here.




S

2 - Hold Time

like the light to remiain 'on' once no movement Hold time means the time period you would

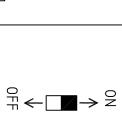

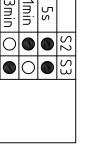

5min

0

nuisance triggering stops. materials, if this occurs reduce the detection area until any Microwave sensors will detect movement through certian

preferred Detection area, Hold Time & Daylight level.

Using the Dip Switches on the sensor, set it up to your


the light on when movement is detected, then hold the light on for the determind amount of time, after which the light will

This Microwave sensor is a motion activated switch, it will turn

3 - Standby Level

Standby level can be set to dim between 100 - 10% or 100% - 0% (off) following the guide as shown here. using the combination on the Dip Switches,

light 'on' at specific daylight levels. To have the sensor function in daylight set the Dip Switches to Disable. 4 - Daylight Sensor
The daylight sensor can be set to bring the

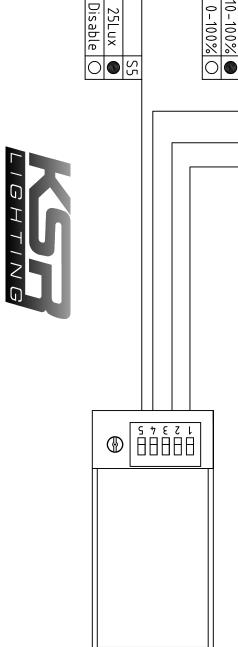



Bulkhead

All tests must be undertaken at times of least risk and in accordance with EN 50172:2004 as indicated below:

Dally:

LED charge indicators shall be visually inspected for correct operation.

Monthly:

(in addition to the daily check) If automatic testing devices are used, the results of the short duration tests shall be recorded. Test shall be carried out as follows:

Switch the luminaire over to emergency mode to operate from the batteries by simulating a failure of supply to the emergency circuit for a period sufficient to ensure correct luminaire operation.

Note: The period of simulation failure should be sufficient for the purpose of this clause whilst minimising should be restored and any indicator lamp or device should be checked to ensure that is showing that the supply has been checked to ensure that they are present, clean and functioning correctly. At the end of this test period, the unswitched supply damage to the system components e.g lamps. During this period, all luminaires shall be

Annually

other systems the monthly inspection shall be carried out and the following additional If automatic testing devices are used, the results of the short duration tests shall be recorded. For all

- Each luminaire shall be tested monthly as above but for its full duration in accordance with the manufacturer's information.
- ensure that it shows the unswitched supply has been restored. The charging arrangements should be checked for proper The unswitched supply for the luminaire should be restored and any charge indicator lamp or device should be checked to functioning.
- 3. The date of the test and its results shall be recorded in the system logbook.

A copy of this report must accompany any emergency luminaire returned to KSR Lighting for any reason.



06.11.2020RTG