

Installation Sheet

KSRSF301

Read these instructions before commencing installation. Please give these instructions to the owner/occupier after installation to retain for future reference/maintenance.

IP65 IK08  0.3m  UK  CE 240V~50HZ 12W

These fittings are Class II and do not need an Earth, but Earth provision is provided.

Important Information

It is recommended that these luminaires are installed and fitted by a qualified electrician ensuring the installation complies with current IEE wiring regulations & local building control. These products are designed for connection to a 240V~50Hz supply.

Any faulty, broken or damaged luminaires should be replaced immediately.

KSRR will not accept responsibility for any claims arising from a poor installation.

Please Note: The limited warranty shall be deemed null and void in the following circumstances: Failure by the installer, end user or any third party to exercise caution to protect any covered product or part from outside damage, adverse temperature (normal operating ambient temperature 0°C - +25°C), humidity conditions, fluctuations in the electrical system or physical abuse as well as failure related to workmanship in the installation of the products or parts.

Important User Advice

Always switch off mains supply before servicing.

Do not use Megger or similar high voltage instruments. Due to the fact this luminaire contains electronic components that maybe damaged by high test voltages, they must be disconnected from the circuit before testing.

To prevent damage to the driver, do not mix with conventional magnetic ballasts on the same electrical circuit.

At the end of life the luminaire is classed as WEEE under directive 2014/30/EU and should be disposed of in accordance with local legislation.

Installation Procedure

Isolate mains supply before installation.

Unscrew and retain the four screws and remove the diffuser.

Loosen the single LED tray screw as indicated on the LED tray and lift the hinged tray to gain access to the wiring terminals.

Pass intended supply wires through grommet.

Ensure the fixing surface is flat and even.

Fix base to the wall, ceiling or besa box using adequate fixings with regard to the type of surface.

Ensure incoming cables are protected.

Terminate wiring as per Fig. 2, please note an Earth terminal is only supplied to aid the continuation of the Earth circuit.

Re-secure the LED tray.

Please note: For testing purposes a provision should be made in the circuit for disconnection of the unswitched live (i.e. key switch), re-fit the LED tray and select colour required using the dip switches on the tray Note: Never change the LED colour with the luminaire powered on as this can damage the luminaire. If the luminaire does not come on please ensure the dip switches are in the correct variation as per Fig. 3.

Make sure the seal is in place in the diffuser and undamaged.

Replace the diffuser re-secure using the four screws.

Turn on the mains supply and test luminaire.

If using an optional rim clip the rim over the fitting and stick supplied label on the rim so it can be viewed Fig. 4.

This fitting requires a 24 Hour initial charge period prior to any emergency testing. Please see overleaf for testing routine, write on the battery label in permanent ink the date of commissioning.

All results must be recorded and left with the end user.

The battery has a design life of at least 4 years but should be replaced if the duration of operation is less than 3 hours after a 24hr charge time with no interrupted supply.

Please note: Depending on the amount of fittings on a circuit you may have to upgrade the breaker to a 'C' or 'D' type to avoid nuisance tripping.

Navara SF




12W Triple CCT Emergency Bulkhead

Available Rims: Various please visit www.ksrlighting.com for options

Fig. 3

<input checked="" type="radio"/>	ON
<input type="radio"/>	OFF
<input type="radio"/>	1
<input type="radio"/>	2
<input checked="" type="radio"/>	DL
<input checked="" type="radio"/>	WW
<input checked="" type="radio"/>	CW

Fig. 1

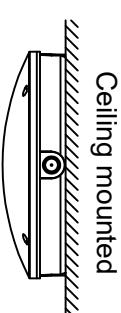

Wall mounted



Fig. 4

X	2	Axxxxx	180
---	---	--------	-----

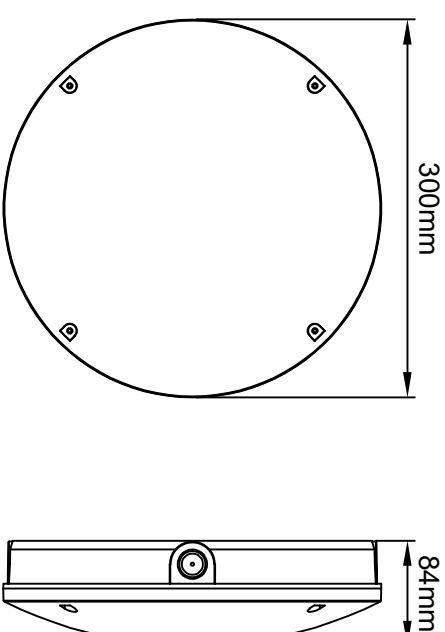


Fig. 2

Mains Supply	Luminaire
Neutral	N - Blue
Earth	Not used
Switch Live	SL - Brown
Permanent Live	PL - Black

Lamp Details

Lamp: LED
Wattage: 12W
Colour: 3000K, 4000K and 6000K CCT
Lumen Output:
3000K - 1017 lumens
4000K - 1147 lumens
6000K - 1040 lumens
CRI: Ra>82

The light source of this luminaire is not replaceable, when the light source reaches its end of life the light source and control gear shall be replaced

This product contains a light source of energy efficiency class E

KSRR Lighting Aftersales: 023 92 674343

E-mail: aftersales@ksrlighting.com

KSRR Lighting Ltd, Unit E Hazleton Interchange, Lakesmere Road, Horndean, Hampshire, PO8 9JU

All tests must be undertaken at times of least risk and in accordance with EN 50172:2004 as indicated below:

Daily:

LED charge indicators shall be visually inspected for correct operation.

Monthly:

(in addition to the daily check) If automatic testing devices are used, the results of the short duration tests shall be recorded. Test shall be carried out as follows:

1. Switch the luminaire over to emergency mode to operate from the batteries by simulating a failure of supply to the emergency circuit for a period sufficient to ensure correct luminaire operation.

Note: The period of simulation failure should be sufficient for the purpose of this clause whilst minimising damage to the system components e.g lamps. During this period, all luminaires shall be checked to ensure that they are present, clean and functioning correctly. At the end of this test period, the unswitched supply should be restored and any indicator lamp or device should be checked to ensure that is showing that the supply has been restored.

Annually:

If automatic testing devices are used, the results of the short duration tests shall be recorded. For all other systems the monthly inspection shall be carried out and the following additional tests made:

1. Each luminaire shall be tested monthly as above but for its full duration in accordance with the manufacturer's information.
2. The unswitched supply for the luminaire should be restored and any charge indicator lamp or device should be checked to ensure that it shows the unswitched supply has been restored. The charging arrangements should be checked for proper functioning.
3. The date of the test and its results shall be recorded in the system logbook.

A copy of this report must accompany any emergency luminaire returned to KSR Lighting for any reason.



